

1G/2.5G/ 10G Base-T to 10G Base-R Media Converter



3C-SFP0101TGN

1. Overview

1G/ 10G Base-T to 10G Base-R Media Converter supports two types media for network connection such as 1G/10GBase-T and 10GBase-FX. The bridge media converter is designed with a 1G/10Gbase Ethernet PHY chip that connects two types segments operation smoothly. This converter can be used as standalone unit or as slide-in module to the 19" converter rack Chassis for use at a central wiring closet.

2. Technical Specifications

Standards	1000Base-T, 2.5GBase-T, 5Gbase-T, 10Gbase-T 1000Base-X, 2500Base-X, 5GBase-R, 10GBase-R
Media Supported	1000Base-T: Cat5 UTP/STP. MAX 100m; 2.5GBase-T: Cat5e UTP/STP. MAX 50m; 5GBase-T: Cat5e UTP/STP. MAX 50m; 10G Base-T: Cat6a UTP/STP. MAX 50m;
Port Type	RJ45, SFP Slot
Work Mode	1000Base-T to 1000Base-X 2.5GBase-T to 2500Base-X 5Gbase-T to 5GBase-R 10Gbase-T to 10GBase-R

Power Supply	12V DC
Power consumption	MAX 5W
Operation Temperature	0°C to 55°C
Relative Humidity	5% to 80% (non-condensation)

3. Installing the Converter

For as a standalone unit:

- Verify the DC adapter conforms to your country DC power requirement and insert the power plug
- Connect the media cable for network connection

For as a slide-in unit:

- The slide-in Media Converter and Converter Rack Chassis should supplied only from the same source, both Media Converter Rack Chassis are built to match each other at dimension, DC jack, DC receptacle and power safety.
- Turn off the 19" converter rack power
- Locate +12V DC power jack on converter back, carefully slide in and plug to 19" rack +12V DC power receptacle
- Connect the media cable for network connection
- Turn on the converter rack power, the Power LED will light up

Wire connection, Front and Side panel

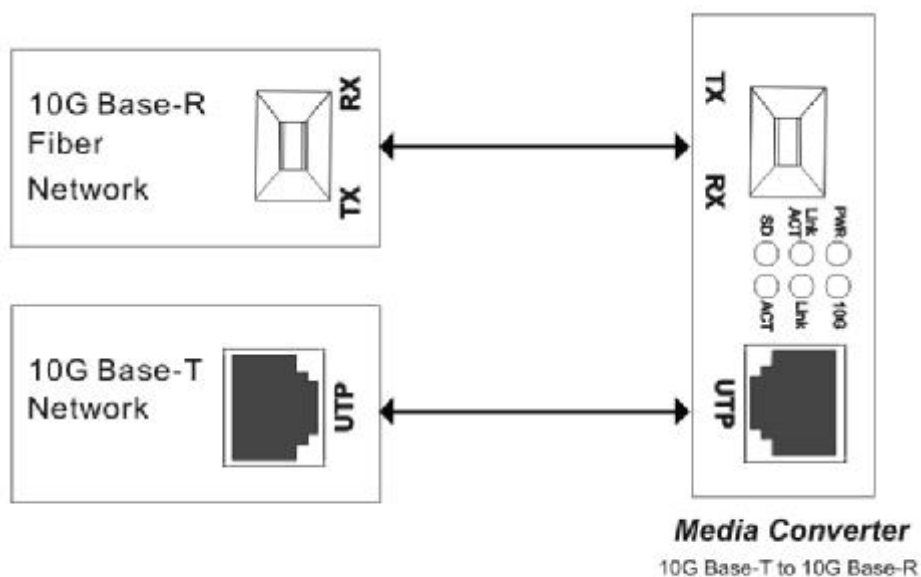


Fig:Basic Network connection

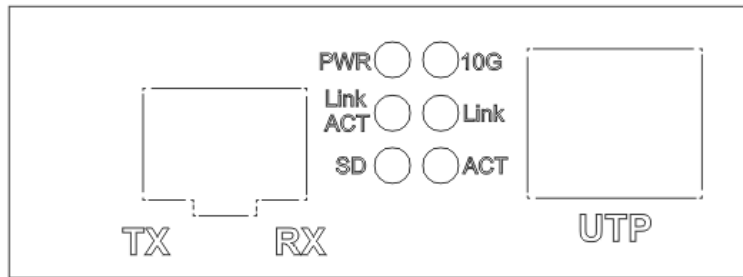


Fig.2 Converter Front Panel for external power



Fig.3 Rear panel

4. Check List

Before you start installing the Converter, verify that the package contains the following:

---The TP-Fiber Converter

---AC to 12V DC Power Adapter (for external models) or Power Cord (for internal models)

---The User's Manual

Please notify your local sales distributor immediately if any of the aforementioned items is missing or damaged.

5. LED Description

LED	Status	Description
PWR	On	Power is on and normal.
FX Link/Act	On	Connection status display for Fiber Link. “ON” indicates that Fiber link is in correct connection.
	Blink	Active status display of fiber link. “Blink” indicates packet goes through FX end.
SD	On	Fiber signal is detected.
10G	On	Transfer rate of electric interface is 10Gbps.
	Off	Rate of electric interface is 1G/2.5Gbps
TX Link	On	Connection status display for electric link. “ON” indicates that electric link is in correct.
TX Act	Blink	Active Status display of fiber link “Blink” indicates packet goes through TX end.



Specifications are subject to change without notice. It is a registered trademark of 3C-LINK Technology Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders. No part of the specifications can reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from 3C-LINK Technology Co., Ltd.