


NCP Card

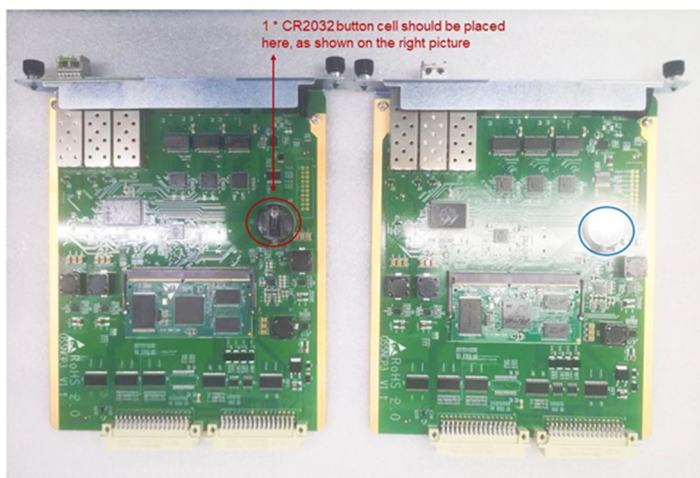

PS: the CR2032 button cell of NCP card has been removed due to airfreight limitation, it can help to keep the set alarm time after a sudden power failure, otherwise it has to be reset after each power failure.

Please prepare this type of battery by your team, 1 CR2032 battery is required for 1 NCP card.

Module temperature:

The working temperature of the coherent transceiver is 0~70°C, but it is best to keep it between 55°C to 60°C@ room temperature for long-term operation.

Web:

Default IP address of the device: 192.168.1.100

Default HTTP access port: 9091

Username: webadmin

Password: admin

NMS:

Installation password: abc123

Username: superadmin

Password: 123456

Please disable antivirus software and firewall, then install the Microsoft runtime library VisualCppRedist_AIO_x86_x64-en environment, and then install the NMS software, please install it on a disk other than the C drive.

If you have installed an older version of the NMS software, please remove it from your computer and then install this new version, this action will not affect the normal operation of your equipment hardware or services.